

VISOCOLOR® ECO

Testanleitungen

Test instructions

Instructions des tests

Instrucciones de los tests



zur visuellen Bestimmung
for visual determination
pour la détermination visuelle
para la determinación visual


visocolor® ECO Carbonathärte

Carbonate hardness / Dureté carbonatée / Alcalinidad de Carbonato


Messbereich / Range / Domaine de mesure / Rango

1 Δ \triangleq 1 $^{\circ}$ d


REF 931 014

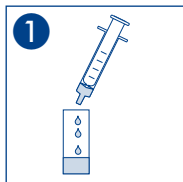


1 5 mL Probe
Sample
Echantillon
Muestra

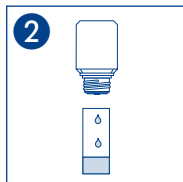


2 2 Δ CH-1

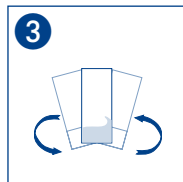

3 Umschwenken
Shake gently
Secouer légèrement
Mezclar volteándolo

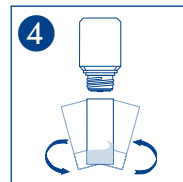

4 Δ CH-2
bis Farbumschlag
till coloration
jusque inversion de couleur
hasta cambio de color

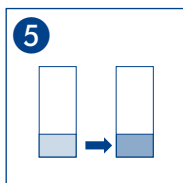

5 1 Δ \triangleq 1 $^{\circ}$ d
blau \rightarrow rot
blue \rightarrow red
bleu \rightarrow rouge
azul \rightarrow rojo



Meerwasser
Sea water
Eau de mer
Agua de mar